

# ETAS ES165.1

## Media Converter



User Guide

## **Copyright**

The data in this document may not be altered or amended without special notification from ETAS GmbH. ETAS GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license. Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH.

**© Copyright 2026** ETAS GmbH, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

ES165.1 | User Guide R05 EN | 03.2026

## Contents

<b>1</b>	<b>Introduction</b> .....	<b>5</b>
1.1	About ES165.1 - Media Converter .....	5
1.1.1	Scope of application .....	5
1.1.2	Properties .....	5
1.2	Target audience and intended use .....	6
1.3	Safety instructions and classification .....	7
1.3.1	Classification of safety messages .....	8
1.3.2	Assembly .....	9
1.3.2.1	Assembly location .....	9
1.3.2.2	Securing the product .....	9
1.3.2.3	Ventilation .....	10
1.3.3	Operation .....	10
1.3.4	Electrical connection .....	10
1.3.5	Cables and accessories .....	11
1.4	Unpacking .....	11
<b>2</b>	<b>Product overview</b> .....	<b>13</b>
2.1	Graphical overview of elements .....	13
2.2	Compatibility .....	13
2.2.1	System requirements .....	13
2.2.2	Compatible products .....	14
<b>3</b>	<b>Hardware setup</b> .....	<b>15</b>
3.1	Transportation and packaging .....	15
3.2	Mounting and placement .....	15
3.3	Connection to the power supply .....	15
3.4	Connection with other products .....	16
3.4.1	Failsafe automotive ethernet operation .....	17
<b>4</b>	<b>Basic operation</b> .....	<b>18</b>
4.1	Status indicator .....	18
4.1.1	Connection status of Automotive Ethernet (AE) .....	18
4.1.2	Device status .....	21
4.1.3	Connection speed .....	22
<b>5</b>	<b>Commissioning</b> .....	<b>23</b>
5.1	Web interface .....	23
5.1.1	Determining IP Address .....	23
5.1.2	Manual Master-Slave Configuration .....	23

5.1.3	Manual Configuration of the Connection Speed (Automotive Ethernet)	24
5.1.4	Resetting Data Loss Errors	24
<b>6</b>	<b>Technical specification</b>	<b>25</b>
6.1	Hardware specifications	25
6.1.1	Ambient conditions	25
6.1.2	Electrical data	25
6.1.3	Mechanical data	25
6.2	Product markings	26
6.3	Connectors	28
6.3.1	Terminal assignment of cables	29
6.3.2	Terminal assignment of sockets	29
<b>7</b>	<b>Maintenance</b>	<b>31</b>
7.1	Cleaning	31
7.2	Firmware and software update	31
7.2.1	Updating the Firmware	31
7.3	Repair service	31
<b>8</b>	<b>Accessories and order information</b>	<b>32</b>
8.1	Module	32
8.2	Cables	32
8.2.1	Automotive ethernet cable	32
8.2.1.1	CBEB310.1-3 (shielded)	32
8.2.1.2	CBEB311.1-3 (unshielded)	33
8.2.1.3	CBEB312.1-0m5 (shielded)	33
8.2.1.4	CBEB313.1-0m5 (unshielded)	34
8.2.1.5	CBEB122.1-3 (shielded)	35
<b>9</b>	<b>Contact Information</b>	<b>36</b>
<b>10</b>	<b>Return form</b>	<b>37</b>
<b>11</b>	<b>Legal information</b>	<b>38</b>
11.1	Use of Open Source Software	38
11.2	Certification and conformity	38
11.2.1	Declarable Substances	38
11.3	Standards and norms	38
11.3.1	EMC Class A	39

# 1 Introduction

## 1.1 About ES165.1 - Media Converter

The ES165.1 Media Converter converts Automotive Ethernet (100/1000BASE-T1) into Standard Ethernet (IEEE 802.3). The connection speed and connection mode of the Automotive Ethernet can be configured via a web interface.

With the ES165.1, communication speed on the host side is limited to a maximum of 100 Mbit/s.



### 1.1.1 Scope of application

The ES165.1 can be used for the following tasks:

- Recording and capturing of communication data as well as calibration of ECUs
- ECU diagnostics

### 1.1.2 Properties

The most important properties of the ES165.1 Media Converter:

- Conversion of Automotive Ethernet (100/1000BASE-T1) into Standard Ethernet
- Automotive-capable product that is suitable for use in the development environment and in the vehicle on test courses
  - Adaptable to ambient conditions (temperature, EMC)
  - Wide supply voltage range
  - High level of mechanical stability and robustness
- Display of the operating state and fault state
- Lemo connector for connection of the product to ETAS modules
- Automatic and manual configuration of the Automotive Ethernet speed (100/1000 Mbit/s) and the Master/Slave mode
- Support time synchronization in accordance with IEEE1588
- Compensation for the signal runtimes corresponding to the Precision Time Protocol PTP (IEEE1588)
- Standby operation
- Firmware updates via Hardware Service Pack (HSP)
- No additional drivers required
- Together with BR-XETKs, the product supports the measurement, application and flash programming of ECU

## 1.2 Target audience and intended use

### *Target audience*

For the safe and efficient use of the product, the user is expected to have comprehensive expertise and practical experience in the following automotive domains:

- Electrical and electronic system architectures in motor vehicles
- Sensor technology and control engineering
- Bus systems and communication protocols
- Electronic control unit (ECU) development and calibration
- Safety guidelines and regulatory requirements for the development and validation of vehicle systems

### *Intended use*

The product was developed and approved for applications in the automotive sector. Only operate the product as per its specifications. If the product is used in any other way, product safety is no longer ensured.

The interface modules are designed for the following applications:

- Detecting signals from ETK and ECU interfaces, as well as from vehicle buses
- Flash programming of ECUs

### ***Application areas***

- The product is approved for use in the following areas:
  - Interior
  - Passenger compartment
  - Trunk
- Do not operate the product in a wet or damp environment.
- Do not operate the product in potentially explosive atmospheres.

### ***Technical condition***

The product is designed in accordance with state-of-the-art technology. Only operate the product and its accessories if they are in perfect working order. Shut down a damaged product immediately. Do not open or alter the product. Only ETAS may make changes to the product.

## **1.3 Safety instructions and classification**

Refer to the following safety instructions and the technical documentation available to download from the ETAS website [www.etas.com](http://www.etas.com). Keep the information provided in a safe place.

Failure to comply with the safety instructions may lead to the risk of damage to life and limb or property. The ETAS Group and its representatives shall not be liable for any damage or injury caused by improper operation or use of the product.

Only use the product if you have read and understood the information concerning safe operation and have the required qualifications and training for this product. If you have questions about safe operation, contact ETAS:

- Technical Support: [www.etas.com/hotlines](http://www.etas.com/hotlines)
- Regional ETAS Contact Partner: [www.etas.com/contact](http://www.etas.com/contact)

The product is only approved for the applications described in the technical documentation. When using and operating this product, all applicable regulations and laws must be observed.

ETAS products, made available as beta versions or prototypes of firmware, hardware and/or software, are to be used exclusively for testing and evaluation purposes. These products may not have sufficient technical documentation and not fulfill all requirements regarding quality and accuracy for market-released series products. The product performance may therefore differ from the product description. Only use the product under controlled testing and

evaluation conditions. Do not use data and results from beta versions without prior and separate verification and validation and do not share them with third parties.

Before commissioning, check whether a Known Issue Report (KIR) is available for the current product version: [www.etas.com/kir](http://www.etas.com/kir) (Password: KETASIR). Note the information given in the report.

Program codes or program control sequences that are created or changed via ETAS products, as well as all types of data obtained through the use of ETAS products, must be checked for their reliability and suitability prior to use or distribution. Only use these codes or sequences in public areas (e.g. in road traffic) if you have ensured that the application and product settings are safe through testing in self-contained and designated testing environments and circuits.

This ETAS product allows you to influence safety-relevant systems or data (e.g. in motor vehicles, vehicle components and test benches). In the event of a malfunction or a hazardous situation, it must be possible to put the system into a safe state (e.g. emergency stop or emergency operation).

### 1.3.1 Classification of safety messages

Safety messages warn of dangers that can lead to personal injury or damage to property:



#### **DANGER**

**DANGER** indicates a hazardous situation that, if not avoided, will result in death or serious injury.



#### **WARNING**

**WARNING** indicates a hazardous situation that, if not avoided, could result in death or serious injury.



#### **CAUTION**

**CAUTION** indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

**NOTICE**

**NOTICE** indicates a situation that, if not avoided, could result in damage to property.

### 1.3.2 Assembly

Only install, connect, disconnect and cable ETAS products and components when they are de-energized.

#### 1.3.2.1 Assembly location

**CAUTION****Class A product**

This product is not intended for use in residential environments and might not provide adequate protection to radio reception in such environments.

**NOTICE****Damage to the electronics due to potential equalization**

The cables' shield may be connected to the housing, the ground or the ground for the product's power supply. If there are different ground potentials in the test setup, equalizing currents can flow between the products via the cables' shield.

Take account of different electric potentials in your test setup and take appropriate measures to prevent equalizing currents.

#### 1.3.2.2 Securing the product

The housing must not be damaged while securing the product.

**WARNING****Risk of injury due to inadequate fastening**

- Secure the product so that it does not move uncontrollably.
- Only use carrier systems and fastening materials that can accommodate the static and dynamic forces of the product and are suitable for the ambient conditions.

### 1.3.2.3 Ventilation

- Protect the product against direct solar radiation and other sources of heat.
- Ensure that there is sufficient air circulation for efficient heat exchange.

### 1.3.3 Operation

Only operate the product with the latest firmware. You can find information about updating the firmware in the chapter "[Firmware and software update](#)".

If the firmware update is not completed successfully, try it again. If a new firmware update is not possible and the product is not functional, send the product to ETAS.



#### **WARNING**

##### **Risk due to undefined vehicle behavior during an ECU reset**

If you operate the product in combination with ETKs, the ECU must not be reset in an uncontrolled manner.

- Only make changes when the vehicle is stationary (e.g. changes to the test setup, changes to the ETK configuration, software updates).

### 1.3.4 Electrical connection

#### **Electrical safety and power supply**

- Only connect the product to electric circuits with safety extra-low voltage in accordance with IEC 61140 (devices of class III) within the voltage limits for accessible parts as per IEC 61010-1.
- Observe the connection and setting values.
- The power supply for the product must be safely disconnected from the supply voltage. For example, use a car battery or a suitable lab power supply.
- Only use lab power supplies with dual protection for the supply network (with double/reinforced insulation (DI/RI)).
- The power supply must be suitable for use according to the ambient conditions for the product.
- It is possible to discharge the vehicle battery in regular operation and long standby operation.
- Central load-dump protection is required for operation.

#### **Connection to the power supply**

The product is powered via an ETAS module in the test setup.

## To de-energize the product

1. Disconnect the product from the power supply in one of the following ways:
  - Switch off the laboratory power supply for the test setup.
  - Disconnect the test setup's connection to the vehicle battery.
  - Disconnect the product from the ETAS module supplying the power.
2. Disconnect the product from all interfaces.

### 1.3.5 Cables and accessories

#### Cables

- Only use ETAS cables, cables recommended by ETAS or other cables certified for the application.
- Route the cables such that they are protected against abrasion, damage, deformation and kinking.
- Do not place any objects on the cables.
- Do not use any damaged cables.
- The connector and connection must not be dirty.
- The connector and connection must be compatible.
- Correctly align the connector with the connection.
- Do not connect the connector and connection by force.

#### Accessories

Use ETAS accessories, accessories recommended by ETAS or other accessories certified for the application.

### 1.4 Unpacking

1. Prepare workspace
 

Unpack in a clean, dry, well-lit area with enough space for the equipment and avoid static damage or physical harm.
2. Open package
 

Use appropriate tools to carefully open the box without damaging the contents.
3. Verify contents
 

Compare the items with the packing list "Contents of Package" to ensure all components are present.

4. Inspect for damage

Visually check each item for physical damage. If found, document and report it to [customer support](#).

## 2 Product overview

### 2.1 Graphical overview of elements



Fig.	Connection	Description
1	LEMO 1B	Combined connection for power supply and 10/100 BASE-T Ethernet (IEEE 802.3) via connected ETAS module (e.g. ES5xx and ES8xx)
2	LEMO 1B	100/1000BASE-T1 Automotive Ethernet connection

## 2.2 Compatibility

### 2.2.1 System requirements

For the configuration of the product as well as the control and data acquisition, you need ETAS software in the following versions:

INCA	starting with Version 7.3.3
HSP	starting with Version 12.3.0

## 2.2.2 Compatible products

The Media Converter ES165.1 can be connected to modules with Lemo-Fast-Ethernet connection and integrated power supply, e.g.:

- ES523.1
- ES600.2
- ES8xx

## 3 Hardware setup

### 3.1 Transportation and packaging

#### *Transport*

- Only transport the product individually.
- Remove all connected cables before transportation.
- Do not transport the product by the connected cables.

### 3.2 Mounting and placement



#### **WARNING**

##### **Risk of injury due to inadequate fastening**

- Secure the product so that it does not move uncontrollably.
- Only use carrier systems and fastening materials that can accommodate the static and dynamic forces of the product and are suitable for the ambient conditions.



#### **CAUTION**

##### **Class A product**

This product is not intended for use in residential environments and might not provide adequate protection to radio reception in such environments.

### 3.3 Connection to the power supply

The ES165.1 is powered by a connected ETAS product.

### 3.4 Connection with other products

#### **NOTICE**

##### **Damage to the electronics due to potential equalization**

The cables' shield may be connected to the housing, the ground or the ground for the product's power supply. If there are different ground potentials in the test setup, equalizing currents can flow between the products via the cables' shield.

Take account of different electric potentials in your test setup and take appropriate measures to prevent equalizing currents.


#### **Note**

Ensure that the test setup is EMC-compliant. A test setup that uses shielded and unshielded components at the same time can lead to impairment of the signal quality and is not recommended by ETAS.

#### **Note**

Please ensure that the device is installed and operated as described in the user manual to maintain the specified EMC properties in the respective application. Deviation from the specified installation and operation instructions or connecting the device with other devices may result in a deviation from the specified EMC properties.

The ES165.1 is designed to connect to an Automotive Ethernet Network, a PC and an external power supply.

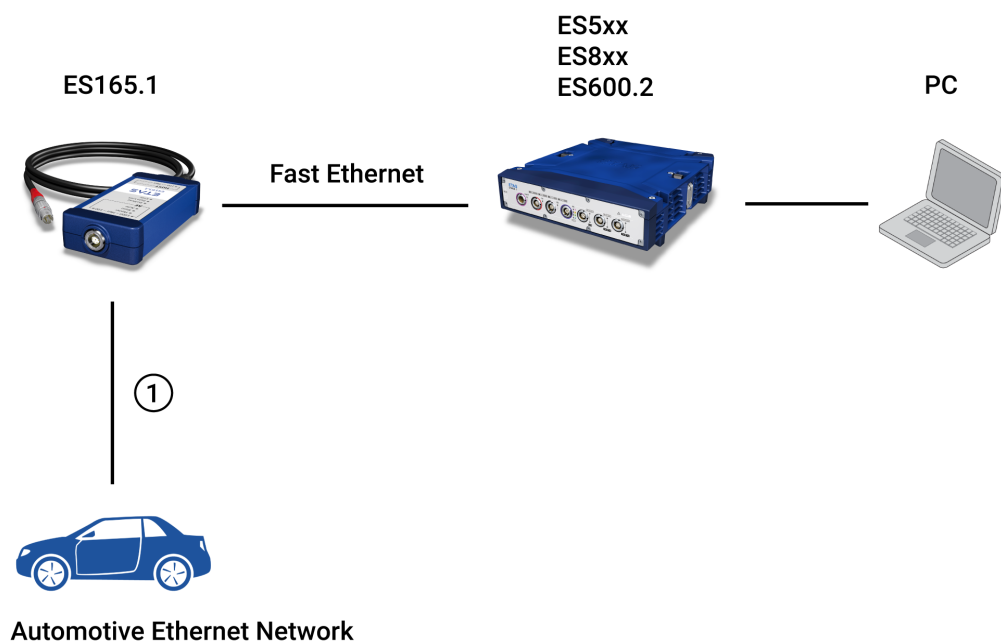

Cables in Fig.	Function	Short name
1	Cables for connection to the Automotive Ethernet Network	CBEB310.1-3
		CBEB311.1-3
		CBEB312.1-0m5
		CBEB313.1-0m5
		CBEB122.1-3

### 3.4.1 Failsafe automotive ethernet operation

For failsafe operation of the automotive ethernet communication channel, all customer specific installations - including cables, connectors and board adaptations - have to be compliant to:

- IEEE Std. 802.3bw™-2015, “Amendment 1: Physical Layer Specifications and Management Parameters for 100 Mb/s Operation over a Single Balanced Twisted Pair Cable (100BASE-T1)”, chapters 96.7 - 96.9
- Open Alliance, “BroadR-Reach® Definitions for Communication Channel, Version 2.0”

#### Note

To achieve an appropriate Automotive Ethernet channel performance all PCB board and cable segments have to be optimized with regard to line impedance matching, length matching within the differential net routing or twisted pair cabling and on the reduction of untwisted regions. Stub segments must be avoided for the Point-to-Point cable connection in favor of inline connectors and shielding measures shall be considered depending on the operation environment.

#### Note

Please contact your ETAS partner if you need to use Automotive Ethernet cables in areas with severe interference.

## 4 Basic operation



### 4.1 Status indicator

The ES165.1 displays the connection status to the Automotive Ethernet (AE), the device status and the connection speed to the host with colored LEDs.



#### 4.1.1 Connection status of Automotive Ethernet (AE)

Default connection mode and connection speed after a restart: Auto


##### *Master (Automatic configuration)*

LED code	Display	State
ON OFF 	Off	No target connected or Slave mode detected
ON  OFF	Lit blue	Target connected in Master mode



##### *Slave (Automatic configuration)*

LED code	Display	State
ON OFF 	Off	No target connected or Master mode detected
ON  OFF	Lit blue	Target connected in Slave mode



##### *Master and slave (Automatic configuration)*

LED code	Display	State
ON  OFF	Master and Slave flash blue at the same time	Connection to target lost


**1000 Mbit (Automatic configuration)**

LED code	Display	State
ON OFF _____ t	Off	No target with 1000Mbit connected
ON  OFF _____ t	Irregular flashing yellow	Target connected, traffic-dependent flashing yellow
ON  OFF _____ t	Lit yellow	Target connected, no traffic



**100 Mbit (Automatic configuration)**

LED code	Display	State
ON OFF _____ t	Off	No target with 100Mbit connected
ON  OFF _____ t	Irregular flashing yellow	Target connected, traffic-dependent flashing yellow
ON  OFF _____ t	Lit yellow	Target connected, no traffic



**1000 Mbit and 100 Mbit (Automatic configuration)**

LED code	Display	State
ON  OFF _____ t	1000Mbit and 100Mbit flashing yellow at the same time	Connection to target lost or being established




**Master (Manual configuration)**

LED code	Display	State
ON OFF _____ t	Off	Manual Slave mode set.
ON  OFF _____ t	Flashing blue	Master mode set; connection to target lost or being established
ON  OFF _____ t	Lit blue	Target connected in Master mode




**Slave (Manual configuration)**

LED code	Display	State
ON OFF _____ t	Off	Manual Master mode set.
ON  OFF _____ t	Flashing blue	Slave mode set; connection to target lost or being established
ON  OFF _____ t	Lit blue	Target connected in Slave mode


**1000 Mbit (Manual configuration)**

LED code	Display	State
ON OFF _____ t	Off	Manual 100Mbit set.
ON  OFF _____ t	Flashing yellow	Connection to target lost or being established
ON  OFF _____ t	Irregular flashing yellow	Target connected, traffic-dependent flashing yellow
ON  OFF _____ t	Lit yellow	Target connected, no traffic

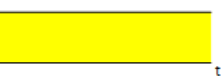


**100 Mbit (Manual configuration)**

LED code	Display	State
ON OFF _____ t	Off	Manual 1000Mbit set.
ON  OFF _____ t	Flashing yellow	Connection to target lost or being established
ON  OFF _____ t	Irregular flashing yellow	Target connected, traffic-dependent flashing yellow
ON  OFF _____ t	Lit yellow	Target connected, no traffic


**Auto (Automatic and manual configuration)**

LED code	Display	State
ON OFF _____ t	Off	Manual Master/Slave mode selected
ON  OFF _____ t	Lit blue	Auto mode selected

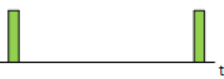
**4.1.2 Device status****On/Busy**

LED code	Display	State
ON OFF _____ t	Off	No power supply
ON  OFF _____ t	Flashing green	Standby
ON  OFF _____ t	Flashing green	Module booting or firmware update initialized
ON  OFF _____ t	Lit green	Boot procedure complete, ready for operation

### Data loss


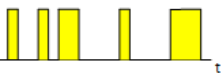
LED code	Display	State
ON OFF ————— t	Off	No data loss detected
ON OFF  t	Lit red	Data loss detected. Restart or acknowledgment in the web interface required

### Error

LED code	Display	State
ON OFF ————— t	Off	Operational
ON OFF  t	Lit red	Interface error, restart required

## 4.1.3 Connection speed

### 100 Mbit

LED code	Display	State
ON OFF ————— t	Off	No host connected
ON OFF  t	Lit yellow	Host connected, no traffic
ON OFF  t	Irregular flashing yellow	Host connected, traffic-dependent flashing yellow

## 5 Commissioning



### WARNING

#### Risk due to undefined vehicle behavior during an ECU reset

If you operate the product in combination with ETKs, the ECU must not be reset in an uncontrolled manner.

- Only make changes when the vehicle is stationary (e.g. changes to the test setup, changes to the ETK configuration, software updates).

### 5.1 Web interface

The connection mode (Master/Slave/Auto) and the connection speed (100/1000 Mbit/Auto) to the Automotive Ethernet can be configured via a web interface. An Internet connection is not required.



### Note

The settings in the web interface are not saved permanently. If the module is disconnected from the power supply, all settings are set back to the default value.

#### 5.1.1 Determining IP Address

You can determine the IP address of the module with the HSP Update Tool. You can find the tool in the Download Center on the ETAS web page.

1. Start the HSP Update Tool.
  2. Search for the hardware with <CTRL> + <H>.
  3. In the Hardware window, mark the desired module.
  4. Open the Properties window with <ALT> + <ENTER>.
- ⇒ In the Properties window under **Communication** > **Communication Parameters**, you will find the IP address of the module.

#### 5.1.2 Manual Master-Slave Configuration

The Master-Slave configuration of the Automotive Ethernet connection can be set manually via a web interface.

1. Open a browser and enter the IP address of the module.
2. Click **Configure**.

3. Remove the checkmark at **Auto Config** in the area **AE**.
4. Mark the desired mode (Master/Slave) in the area **AEMODE**.
5. Click Save to confirm the input.

### 5.1.3 Manual Configuration of the Connection Speed (Automotive Ethernet)

The connection speed of the Automotive Ethernet interface can be set manually via a web interface.

1. Open a browser and enter the IP address of the module.
2. Click **Configure**.
3. Remove the checkmark at **Auto Config** in the area **AE**.
4. Mark the desired connection speed (1000/100) in the area **AESPEED**.
5. Click **Save** to confirm the input.

### 5.1.4 Resetting Data Loss Errors

If different speed settings exist in the two interfaces of the converter due to the system configuration, with higher data through puts this can result, in principle, to data losses. This is not a device error. The devices display these losses via the Data Loss LED (see chapter "LEDs").

1. Open a browser and enter the IP address of the module.
2. Click **Configure**.
3. Click **Clear Data Loss**  
or
4. Disconnect the module from the power supply.

## 6 Technical specification

### 6.1 Hardware specifications

#### 6.1.1 Ambient conditions

Operating temperature range	-40°C to +70°C -40°F to +158°F
Storage temperature range (without packaging)	-40°C to +85°C -40°F to +185°F
Max. relative humidity (non-condensing)	95%
Max. altitude	5000 m / 16400 ft.
Degree of contamination (IEC 60664-1, IEC 61010-1)	2
Protection rating (IEC 60529) (when closed)	IP42


 

#### 6.1.2 Electrical data




Operating voltage range	6 V to 32 V DC
Max. current consumption	1 A
Typical current consumption (standby)	approx. 0.5 mA (at 12 V DC)
Maximum voltage to ground or to all accessible parts (e.g. ECU housing, vehicle chassis)	60 V DC / 30 V AC
Fuse	Max. 20 A
Overvoltage category (mains supply, IEC 60664-1)	II

#### 6.1.3 Mechanical data

Dimensions (H x W x D)	128 x 60 x 27 mm 5.02 x 2.36 x 1.06 in
Dimensions (H x W x D) with cable	3128 x 60 x 27 mm 123.13 x 2.36 x 1.06 in
Weight	0.27 kg / 0.60 lb

## 6.2 Product markings

Symbol	Description
	Please read the user manual before starting up the product.
SN: xxxxxxxx	Serial number
F 00K xxxxxxxx	Order number
x-xx V 	Operating voltage range DC
xxx mA	Max. current consumption
	<p><b>China RoHS</b></p> <p>With the China RoHS identification attached to the product or its packaging, ETAS confirms that the product meets the guidelines of the “China RoHS” (Management Methods for Controlling Pollution Caused by Electronic Information Products Regulation) applicable in the People's Republic of China.</p>

Symbol	Description
	<p><b>CE conformity</b></p> <p>With the CE mark attached to the product or its packaging, ETAS confirms that the product corresponds to the applicable, product-specific Directives of the European Union.</p> <p>The EU Declaration of Conformity for the product is available upon request.</p> <p><b>European Union</b></p> <p>The EU Directive 2011/65/EU limits the use of certain dangerous materials for electric and electronic devices (RoHS conformity).</p> <p>This product does not contain any of the prohibited substances listed in EU Directive 2011/65/EU and does not exceed the maximum authorized concentrations specified. There are currently no equivalent alternative substances for individual electronic components used in our products. We are therefore making use of exemptions 7.a-I, 7.c-I and 6.c (for accessory cables) in Annex III of this Directive. ETAS confirms that the product meets this directive applicable in the European Union.</p>
	<p><b>KCC conformity</b></p> <p>With the KC mark attached to the product or its packaging, ETAS confirms that the product has been registered in accordance with the applicable, product-specific KCC guidelines of the Republic of Korea.</p>
	<p><b>UKCA conformity</b></p> <p>With the UKCA mark attached to the product or its packaging, ETAS confirms that the product meets the applicable, product-specific British standards and directives. The UKCA Declaration of Conformity for the product is available upon request.</p>

Symbol	Description
CAN ICES / NMB 	<p><b>CAN ICES conformity</b></p> <p>This product complies with the Canadian standard:</p> <p>CAN ICES-003(*) / NMB-003(*)</p> <p>* The applicable class of the device is labeled on the product.</p>
	<p><b>Product return and recycling</b></p> <p>The European Union (EU) released the Directive for Waste Electrical and Electronic Equipment - WEEE to ensure the setup of systems for collecting, treating and recycling electronic waste in all countries of the EU.</p> <p>This ensures that the devices are recycled in a resource-friendly way that does not represent any risk to personal health and the environment.</p> <p>The WEEE symbol (see Fig.4-2) on the product or its packaging identifies that the product may not be disposed of together with the remaining trash. The user is obligated to separately collect old devices and provide them to the WEEE return system for recycling.</p> <p>The WEEE Directive applies to all ETAS devices, but not to external cables or batteries.</p> <p>Additional information about the recycling program of ETAS GmbH is available from the <a href="#">ETAS sales and service locations</a>.</p>


### 6.3 Connectors

#### Note

All connections are shown with view of the module interfaces.

### 6.3.1 Terminal assignment of cables


#### *LEMO connector (male)*

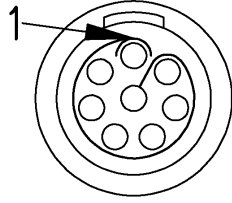

Pin	Signal
1	UBATTP1
2	UBATTP2
3	UBATTM
4	RX_D2+
5	TX_D1-
6	RX_D2-
7	UBATTM
8	TX_D1+
Housing	GND

### 6.3.2 Terminal assignment of sockets

#### *LEMO Socket*

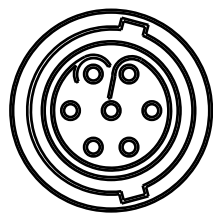

Pin	Signal
1	MDI+
2	GNDCASE <sup>1)</sup>
3	NC
4	NC

<b>Pin</b>	<b>Signal</b>
5	GNDCASE <sup>1)</sup>
6	MDI-
7	GNDCASE <sup>1)</sup>

<sup>1)</sup> Connected with socket housing. In the case of shielded cables (1000Base-T1, e.g. CBEB310) connected to the cable shield.

## 7 Maintenance

### 7.1 Cleaning

- Only clean the product when it is de-energized.
- Do not use cleaning agents that could harm the product.
- Do not apply cleaning agents directly onto the product.
- Use a dry or slightly dampened, soft, lint-free cloth.
- Make sure that no moisture enters the product.

### 7.2 Firmware and software update

#### 7.2.1 Updating the Firmware

The firmware for the product can be updated using the ETAS "Hardware Service Pack" (HSP) service software. You can find the software in the Download Center on the ETAS website: [www.etas.com](http://www.etas.com)

### 7.3 Repair service

If repairs are required, send the product to ETAS.

## 8 Accessories and order information

### 8.1 Module

Order name	Short name	Order number
ES165.1 Media Converter with Lemo-plug (Gigabit Ethernet and power supply)	ES165.1	F 00K 112 184

### 8.2 Cables

#### 8.2.1 Automotive ethernet cable

##### Note


Ensure that the test setup is EMC-compliant. A test setup that uses shielded and unshielded components at the same time can lead to impairment of the signal quality and is not recommended by ETAS.

##### 8.2.1.1 CBEB310.1-3 (shielded)



CBEB310.1-3 is a shielded Automotive-Ethernet cable with an open cable end for connection of the ES165.1 module to a shielded Automotive Ethernet Network.

##### *Pin assignment lemo connector*

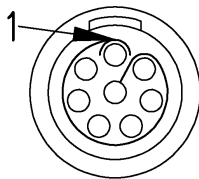

Pin	Signal
1	MDI +
6	MDI -
Housing	GND/CASE


Order name	Length	Order number
CBEB310.1-3	3 m	F 00K 112 243

### 8.2.1.2 CBEB311.1-3 (unshielded)



CBEB311.1-3 is an unshielded Automotive-Ethernet cable with an open cable end for connection of the ES165.1 module to an unshielded Automotive Ethernet Network.


#### Pin assignment lemo connector

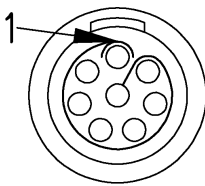

Pin	Signal
1	MDI +
6	MDI -


Order name	Length	Order number
CBEB311.1-3	3 m	F 00K 112 507

### 8.2.1.3 CBEB312.1-0m5 (shielded)

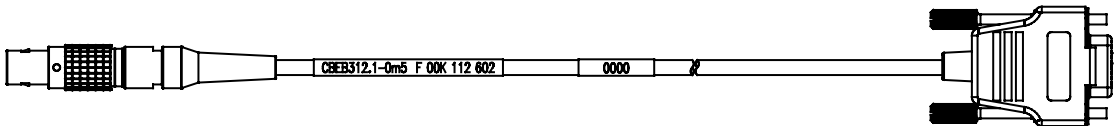

Shielded Automotive Ethernet connection cable with Lemo connector for connection to the ES165.1 module and a 9 pin DSUB connector for connection to a signal source.

#### Pin assignment DSUB connector

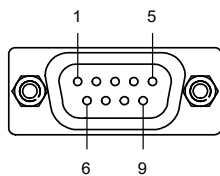

**Note**


Recommended maximum data transmission rate: 100 Mbit/s (100Base-T1) At higher data transfer rates, signal loss may occur.

LEMO		DSUB	
Pin	Signal	Pin	Signal
1	MDI +	4	BR +
6	MDI -	5	BR -
Housing	GNDCASE	Housing	GNDCASE


Order name	Length	Order number
CBEB312.1-0m5	0.5 m	F 00K 112 602

#### 8.2.1.4 CBEB313.1-0m5 (unshielded)

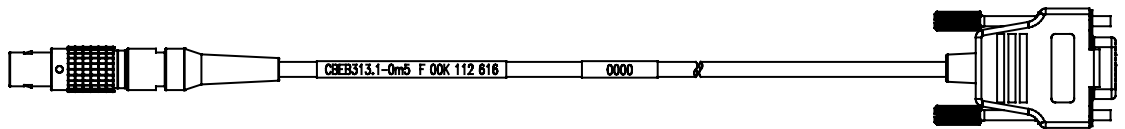

Unshielded Automotive Ethernet connection cable with Lemo connector for connection to the ES165.1 module and a 9 pin DSUB connector for connection to a signal source.

#### *Pin assignment DSUB connector*

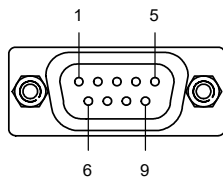


**Note**

Recommended maximum data transmission rate: 100 Mbit/s (100Base-T1) At higher data transfer rates, signal loss may occur.

LEMO		DSUB	
Pin	Signal	Pin	Signal
1	MDI +	4	BR +
6	MDI -	5	BR -
Housing	GNDCASE	Housing	GNDCASE

Order name	Length	Order number
CBEB313.1-0m5	0.5 m	F 00K 112 616
 
### 8.2.1.5 CBEB122.1-3 (shielded)



Shielded Automotive Ethernet connection cable with Lemo connector for connection to the ES165.1 module and a Lemo connector for connection to an ETAS BR\_XETK equipped with the adapter cable CBAM290.1 or similar.



#### Note

Recommended maximum data transmission rate: 100 Mbit/s (100Base-T1) At higher data transfer rates, signal loss may occur.

Order name	Length	Order number
CBEB122.1-3	3 m	F 00K 112 617

## 9 Contact Information

### Technical Support

For details of your local sales office as well as your local technical support team and product hotlines, take a look at the ETAS website:

[www.etas.com/hotlines](http://www.etas.com/hotlines)

ETAS offers trainings for its products:

[www.etas.com/academy](http://www.etas.com/academy)



### ETAS Headquarters

ETAS GmbH

Borsigstraße 24	Phone:	+49 711 3423-0
70469 Stuttgart	Fax:	+49 711 3423-2106
Germany	Internet:	<a href="http://www.etas.com">www.etas.com</a>

## 10 Return form

You can find the return form and information about this process on the ETAS website: [www.etas.com/en/support/hw\\_return\\_form.php](http://www.etas.com/en/support/hw_return_form.php).

## 11 Legal information

### 11.1 Use of Open Source Software

The product might use Open Source Software (OSS). This software is installed on the product at shipment and does not need to be installed or updated by the user. If OSS is used, see the accompanying "OSS Attributions Document" for more information.

### 11.2 Certification and conformity

#### 11.2.1 Declarable Substances

##### *European Union*

Some products from ETAS GmbH (e.g. modules, boards, cables) use components with materials that are subject to declaration in accordance with the REACH regulation (EC) no.1907/2006. The REACH Declaration is available online at [www.etas.com/reach](http://www.etas.com/reach) and is continuously updated.

### 11.3 Standards and norms

The ES165.1 complies with the following standards and norms:

Standards	Title	Further Information
IEC 61010-1:2010	Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements	
IEC 61326-1_2012	Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements	Electromagnetic Environment: Industrial
CISPR 11:2009 + A1:2010	Industrial, scientific and medical equipment - Radio-frequency disturbance characteristics - Limits and methods of measurement	Class of the equipment: Class A Group of the equipment: 1

### 11.3.1 EMC Class A

#### *Republic of Korea*

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

This equipment is in Class A suitable for professional use and is for use in electromagnetic environments outside of the home.

#### *USA*

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### *Responsible Party – U.S. Contact Information*

ETAS Inc.

15800 N. Hagerty Road

Plymouth, MI

48170

[www.etas.com/ww/en/contact/etas-in-the-united-states/](http://www.etas.com/ww/en/contact/etas-in-the-united-states/)